



Electrical and physical specifications

Supply configuration	3-Phase Delta
Input voltage	504 V
Nominal output voltage	480 V
Calculated output at stated input	480.00 V
Rated continuous output current	20 A
Approx. input current at rated load	19.048 A
Capacity at calculated output	16.62 kVA
Connection diagram	H2
Base transformer part	TX-B2-050H-115216
Number of base transformers	2
Rating of each base	500 VA
Base primary / secondary windings	240/480 V / 24/48 V
Dimensions per enclosure (W x D x H)	4.77 x 3.86 x 9.25 in
Weight per enclosure	17 lb
Total base-transformer weight	34 lb
Winding / enclosure	Aluminum / NEMA 3R
Rated frequency	50/60 Hz

Installation and rating notes

Use the connection sheet with this exact base construction. Do not select wiring by voltage alone.

Nominal output is an application label. Actual output varies with supply voltage and load.

The current limit shown above governs; the ordering SKU is retained for traceability.

Confirm equipment current, motor starting requirements and duty before installation.

Autotransformer connections provide no electrical isolation and do not create a neutral.

Installation must be performed by qualified personnel. Disconnect and verify absence of power.

Diagram H2 | 504 V input to 480 V nominal output


Three phase delta | Primary series / secondary parallel | Buck

Continuous output rating: 20 A | Calculated output: 480.00 V

1. Join X4 and X3 on each unit.
2. Join X2 and X1 on each unit.
3. Connect 504 V INPUT A to X4 and X3 on Unit 1.
4. Connect 504 V INPUT C to X4 and X3 on Unit 2.
5. Connect 480 V OUTPUT A to X1 and H4 and X2 on Unit 1.
6. Connect 480 V OUTPUT C to X1 and H4 and X2 on Unit 2.
7. Join H2 and H3 on each unit.
8. Connect INPUT and OUTPUT B to H1 on Unit 1.
9. Bridge B connections between all units.

BASE: 2 x TX-B2-050H-115216 | 500 VA each

Use this diagram only with 240/480 V primary / 24/48 V secondary.

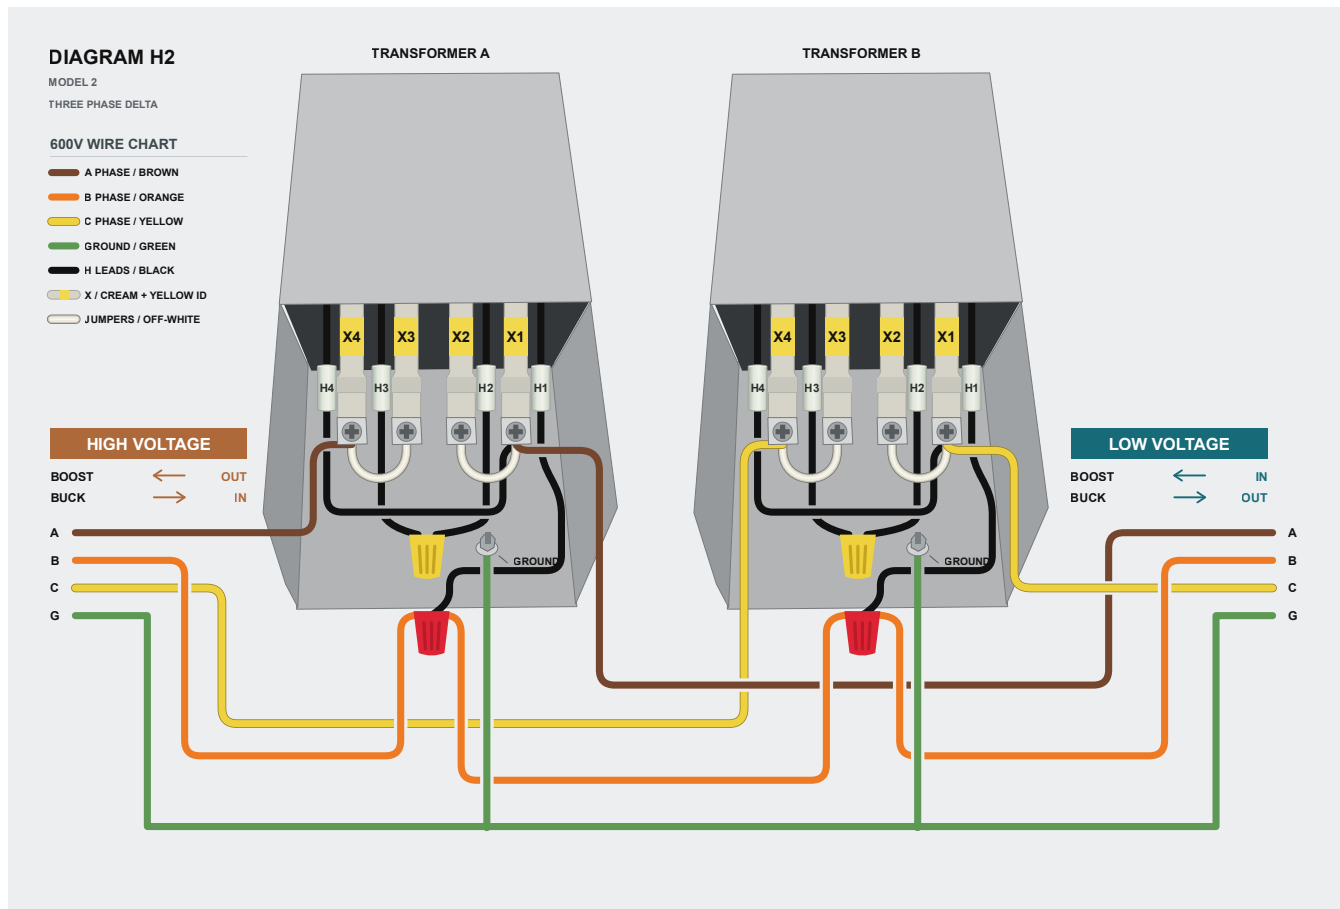

Drawing: LOW VOLTAGE = 480 V OUTPUT; HIGH VOLTAGE = 504 V INPUT.

Disconnect power and verify de-energized before wiring. Bond every enclosure to equipment ground.

Follow the terminal identifiers shown; H2/H3 and X2/X3 differ from some other manufacturers.

Verify input and all output voltages before connecting the load. No circuit isolation is provided.

This connection does not create a neutral. Installation must be performed by a qualified electrician.