

Summary

Single-phase buck-boost transformer. Steps down 382V to 347V at 4.59 amps continuous output. 1.593 kVA capacity. NEMA 3R enclosed, cETLus listed, wall mount.

Product Description

This unit corrects a 382V building supply to 347V at the point of use, permanently, without modifying the building's electrical service. Designed for equipment rated 347V that is installed on a 382V system experiencing overvoltage.

Wired as an autotransformer, the unit handles only the difference between input and output and not the full load. This is why a 4.59-amp buck-boost transformer is significantly smaller and lighter than a 4.59-amp isolation transformer. The encapsulated core construction eliminates audible hum and provides stable thermal performance under continuous duty.

Features a removable wiring compartment door, removable knockout plate, and six NPT knockouts for flexible conduit entry. Surface mounting bracket for easy wall mount installations.



TX-BB-382V-347V-5A — NEMA 3R Encapsulated, cETLus Listed

Specifications

Phase	Single Phase (1-PH), AC	Transformer Type	Buck/Boost
Capacity	1.593 kVA	Configuration	Encapsulated Autotransformer
Primary Voltage	382V	Primary Termination	Lead Wires & Terminal Lugs
Primary Amperage	4.17A	Secondary Termination	Lead Wires & Terminal Lugs
Secondary Voltage	347V	Termination Access	(6) 1/2" NPT Hubs
Secondary Amperage	4.59A	Winding Material	Aluminum
Maximum Primary OCP	15A	Enclosure Material	Steel
Frequency	50/60 Hz	Finish Color	ANSI 70 Light Grey
Insulation	180°C	Weight	11 lbs
Temperature Rise	115°C	Dimensions	4.65 x 3.86 x 8.07

Ratings & Certifications

- Listed for United States
- NEMA 3R Indoor/Outdoor Enclosure
- Built to UL-50 Standards
- CE Certified
- Listed for Canada
- Epoxy Resin Encapsulated
- RoHS Compliant



Common Applications

- HVAC & Minisplit
- Loads CNC Machines
- Pump Stations
- Packaging Machines
- Commercial Kitchen Equipment
- Motor Loads
- EV Chargers
- Server Racks & IT Equipment
- Refrigeration & Walk-in
- Coolers Fans & Blowers
- Conveyor Systems
- Overhead Doors


Important: Buck-boost transformers applied as autotransformers do not provide circuit isolation and do not create a neutral. Contact us if your application requires isolation or neutral creation.



Connection Guide

1. Connect **X2** and **X3** together
2. Connect **H2** and **H3** together
3. Connect High Voltage **L1** to **X4**
4. Connect Low Voltage **L1** to **H4** and **X1**
5. Connect High & Low Voltage **L2** to **H1**

DIAGRAM D2

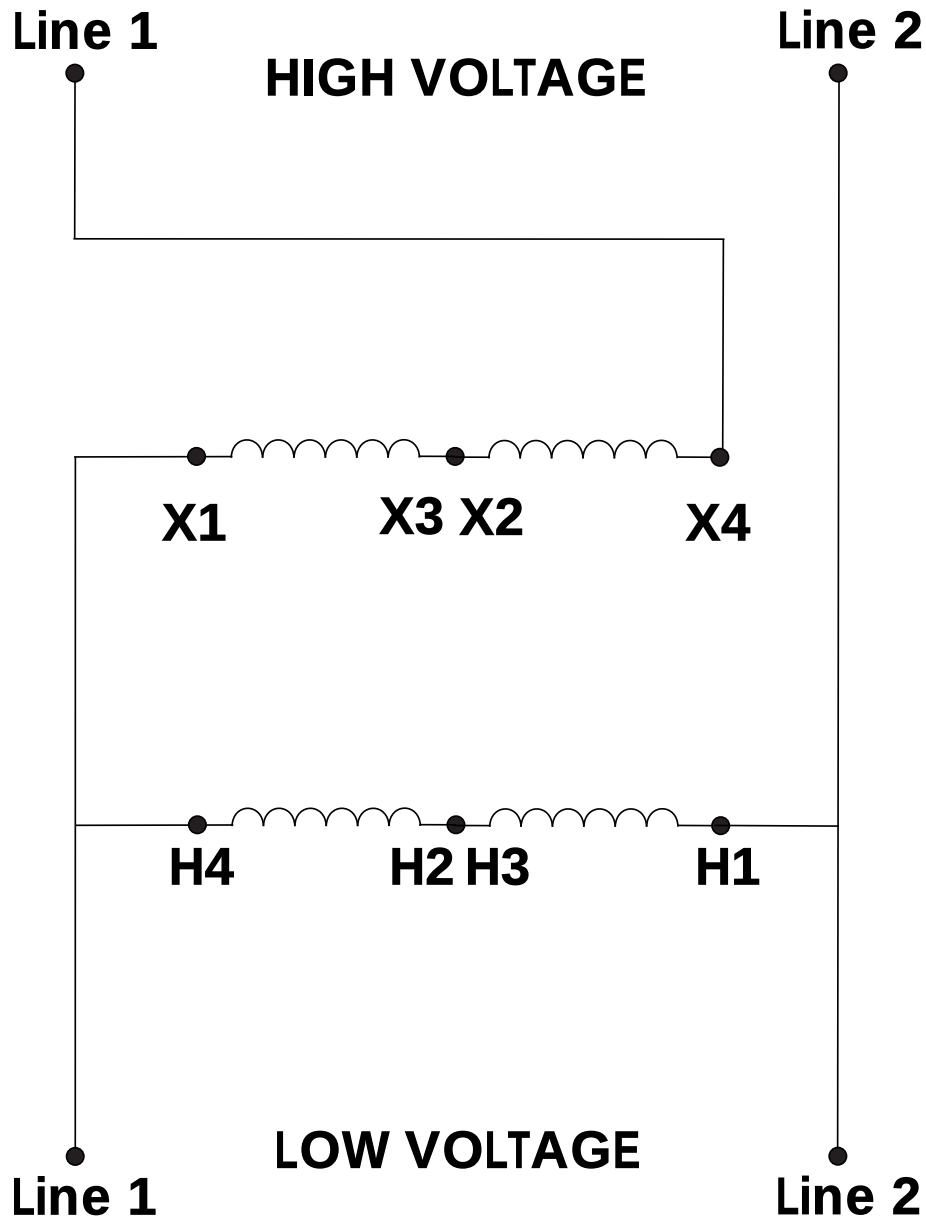



XFMRDIRECT

Part # — TX-BB-382V-347V-5A

Buck-Boost Transformer Specification Sheet

Available at XFMR Direct

Page 4 of 9



TX-BB-382V-347V-5A — NEMA 3R Encapsulated, cETLus Listed



Base Knockouts — (4) $\frac{3}{4}$ " NPT



Side View



Rear View — Surface Mount Bracket



Wiring Compartment — Terminal Leads



Interior — Epoxy Resin Encapsulated Core